


BEARING GREASING INSTRUCTIONS (APPLICATION: SM1500 AND LARGER CRANES)

1. TOOLS

- Grease (Waterproof High Temperature)
- Flat Head Screw Driver

2. GREASE NIPPLE

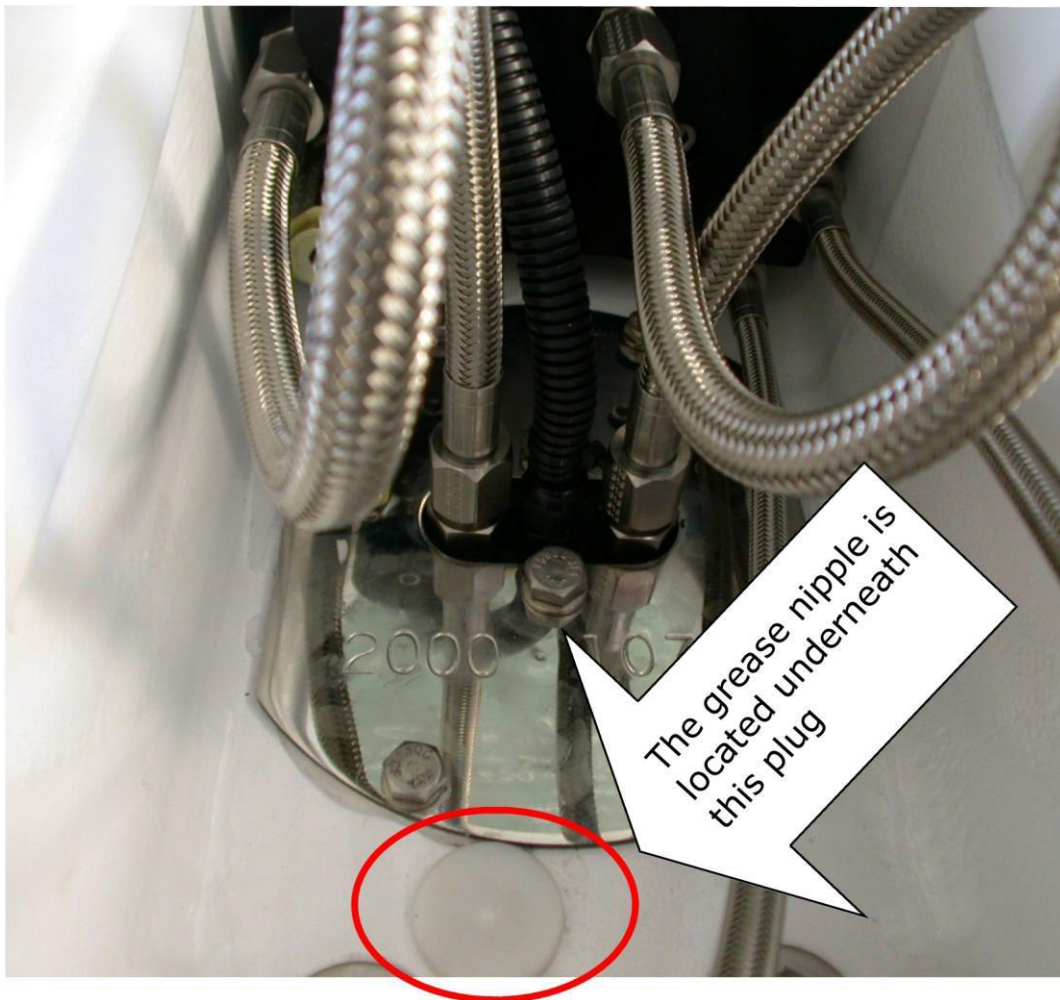

3. INSTRUCTIONS

The main bearing of your yacht crane (All SM & CT Series) needs to be greased thoroughly **every 3 months** to prevent corrosion.

- a. Raise the boom of your crane until you can access the inside of the truck.

Title: Bearing Greasing Instructions
Group: Instruction Guides
File Name: DC-M-B_Bearing_Greasing_Instructions.pdf
Manufacturer: Steelhead Marine
Date: January 11, 2012



- b. Look for the serial number plate, you will find a 3/4" diameter plastic plug directly in front of the serial number plate.
- c. Carefully pry out this plug either with your ginfingers or a flat head screw driver. Underneath you will see a grease nipple.
- d. Using **waterproof high pressure grease**, insert about five (5) shots into the bearing.
- e. Rotate the crane 90 degrees and insert another five (5) shots. Repeat two more times so that you have greased the bearing at four (4) spaced points.
- f. Replace the plastic plug.
- g. Exercise the crane thoroughly in the rotation function to evenly distribute the grease.
- h. Repeat again in 3 months.

4. MAINTENANCE AND SCHEDULE

Check online for additional maintenance and repair information for a wide array of marine parts at www.advantecglobal.com and www.steelheadmarine.net.

Date (mm/dd/yy)	Four Point Greasing				Comments
	1	2	3	4	

5. PARTS LIST

Description	Part Number	Notes / Checked
Waterproof High Pressure Grease	tbd	
Replacement Plug	tbd	
Grease Nipple	tbd	